


Welcome to Nextel Wireless Data Services. This guide contains the basic information to get started using Nextel Wireless Data Services on your phone.

**What You'll Need**

- Nextel Internet-ready Phone
- Wireless Data Services or rate plan that give you access to specific Wireless Data Services
- Nextel.com Member Name and Password (for services such as Mobile Email, Address Book or the advanced features of Text and MMS Messaging) — Register Now

**Wireless Web Navigation Keys**



 
Use the following keys to navigate:

**Home**  - Press once to return to the Wireless Web home page. Press twice to exit Wireless Data Services

 
**Back** \* - Press to return to the previous screen.

**Scroll** - Press the navigation key once to scroll one line at a time, or press and hold to scroll one page at a time. Press OK in the middle of the navigation key to make selection or the (button soft key icon) under "select" depending on the phone model.

**Accessing Wireless Data Services**

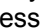

1. From the idle screen, press  to access the Main Menu.
2. Press navigation key to scroll to **Net** and press  under **SELECT**.
3. The first time you access Net, you will be asked to enable security. Press  under Yes.

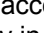**Note:** Home pages will vary depending on the Wireless Web service plan to which you have subscribed.

4. Scroll to highlight the service or area you wish to access and press  under OK or the OK key in the middle of your navigation button.

**User Tip:** Press the number shown to the left of your desired selection to automatically jump to that service.


**Exiting the Wireless Data Services**

1. From anywhere within the Wireless Web, press  to return to the Wireless Web home page.
2. Press  a second time to return to the idle screen.

**Typing with Your Phone**

With Wireless Data Services that require typing, there are generally four text-input modes available: Word, Alpha, Number (NUM) and Symbol (SYM). The display option in the lower right corner of the phone screen indicates the current text entry mode in some models. In other models the default is set to "Word" mode and it does not show up in the lower right hand corner.

To change typing modes when using wireless data services either:


1. Press the key under the lower right corner of the phone screen if the typing mode displays here
- Or -
2. While typing a text message press .
3. Use the navigation key to scroll to and select the mode you desire.

**WORD** or **word** - Press one key for each letter in a word. The phone's software will try to predict the intended word. For example, to type "test," press **8 3 7 8**.

**Next 0 key** - In **word** mode, press to display other words that match the keystroke sequence you entered. For example, after entering **8 3 7 8** for "test," press **0** key to get "vest."

**Punctuation 1 key** - In word mode, press to automatically insert one of eight basic punctuation symbols. Press **0** key to display alternate punctuation choices. Additional punctuation and symbols are available in **SYM** mode.

**ALPHA** or **alpha** - Press each key multiple times as required for the desired letter. For example to type "test," press **8** once (t), press **3** twice (e), press **7** four times (s) and press **8** once (t).

**SYM** - Allows entry of punctuation and symbols. Press the number that corresponds with the symbol shown on the phone screen display. To access additional symbols, press .

**NUM** - allows entry of keypad numbers. Press the desired number on your phone's keypad.

<u>Text entry mode indicator</u>		<u>Desired Case</u>
word or alpha	→	Lowercase text
WORD or ALPHA	→	Uppercase text
+WORD or +ALPHA	→	Caps Lock

*Caps Lock is not available with all phone models.*

**Note:** The default for word and alpha mode is uppercase at the beginning of a sentence, lowercase elsewhere.